


# BioEntry Plus

## 1:1 Scale Drilling Template

Template Instruction.

- 1. Open with Adobe Acrobat Reader.
- 2. Click **File > Print**.
- 3. Select **Actual size**.
- 4. Click **Print**.

DO NOT USE CUSTOM SCALE.

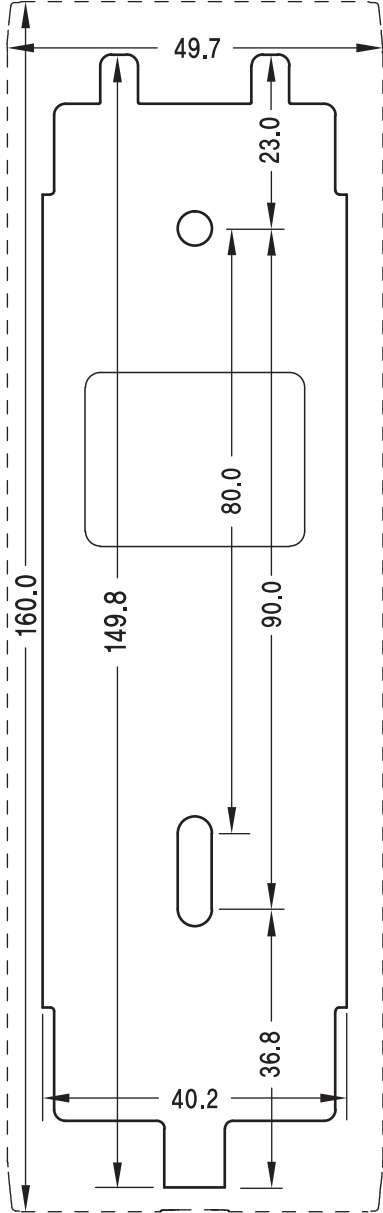

Applicable Model: BEPL-OC, BEPM-OC, BEPH-OC, BEPI-OC, BEPI(FE)-OC